

SANITIZER

Operating Instructions

Aug 30/2016

1. Turn Sanitizer **ON** by flipping the switch at the bottom on the outside of the Sanitizer to the **LEFT** or West.
2. The Sanitizer needs to be “Primed” (bring the heat temperature up). To do this, run the Sanitizer **THREE** times with no dishes or soap.
3. To **RUN** the Sanitizer, simply close the door and push the handle down, the red light on the bottom will come on. When the Red Light goes off, the cycle is finished. Be careful of the **hot steam** when opening the door. The Sanitizer only needs to be primed once and then continual loading and cleaning of dishes can take place.
4. To **clean** the dishes, scrape off all loose food, rinsing is not necessary. **DO NOT LOAD** anything **PLASTIC**. Load the TRAYS (blue or tan) that are in the sanitizer or in the cupboards to the right of the Sanitizer and below the sinks. **One** TRAY at a time goes in. Add **ONE** scoop of dish detergent (on the door), close the door, push the handle down, red light comes on, cycle takes approximately **5 minutes**, light goes off .
5. Open the door, let the steam clear, remove the hot TRAY, place it on the counter and allow the dishes to cool slightly before handling them.
6. Another TRAY can be loaded immediately (follow Step 4) until all dishes are cleaned.
7. When finished, take a paper towel and wipe out any excess food caught by the filter on the bottom of the sanitizer.
8. Close the door lightly and turn the switch on the bottom to the right for **OFF** or to the East.